

90 Day Warranty

Keytools warrants that this product, which it distributes on behalf of the manufacturer, will be free from defects in materials and workmanship for a period of 90 days from the date of original retail purchase. Keytools will replace or repair a defective product provided that the product is returned, shipping pre-paid, to Keytools, during this warranty period.

To obtain a repair or replacement, outside this period, contact Keytools for a Return Merchandise Authorisation (RMA) and shipping information. Then return the product, pre-paid in suitable protection, together with the RMA number, proof of purchase and a cheque or purchase order for £15.00 to cover return shipping and handling.

This warranty does not extend to any products, which have been damaged as a result of accident, misuse, abuse or as a result of service or modification by anyone other than Keytools. This warranty does not extend to the use of this product with equipment other than that for which it is designed, and is provided in addition to your statutory rights.



FCC STATEMENT ON CLASS B CERTIFIED EQUIPMENT (USA)

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used properly, that is, in accordance with the manufacturer's instructions, may cause harmful interference to radio communications. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Re-orient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio/TV technician for help.

Notice:

- 1) Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- 2) Shielded interface cables must be used in order to comply with the emission limits.

Keytools Ltd. PO Box 700, Southampton, SO17 1LQ.

Tel: +44 23 8058 4314 Fax: +44 23 8055 6902. Email: info@keytools.com.

www.keytools.com

BigKeys

© Nov 2005 Keytools Ltd

BigKeys LX Simplified Computer Keyboards



Connection

Most items require the computer to be switched off prior to plugging in or unplugging keyboards. It could damage the computer or peripherals if this advice is not followed.

To connect your BigKeys LX keyboard to a computer PS2 port:

- Shut down the computer according to the manufacturers instructions
- Get yourself in a position where you can see as well as reach the back of the computer.
- Unplug the existing keyboard
- Look at the way in which your BigKeys LX connector is orientated and line it up with the socket before you attempt to push it in. If it does not feel right then check before you force it any further.

To connect to an USB port an optional USB adapter is available.

To connect to an AT port an optional AT adapter is available.

Damage caused to PS2, Serial, USB or any other connector (bent pins etc) by carelessness when fitting is not covered by warranty.

All computer peripherals are required to be kept clean and free from dirt or any foreign objects or liquids. Some items may require cleaning due to the nature of their use.

If you require any assistance please contact the technical support team on 023 80 584314

BigKeys

© Nov 2005 Keytools Ltd



Assist Mode

Assist mode holds the F key down until another key is pressed.

To enter assist mode press the CAPS LOCK key three times in a row.

To exit assist mode press the CAPS LOCK key three times in a row.

When in assist mode the F key needs to be pressed twice to send an F to the computer screen.

If you press the F key once and it appears on the computer screen you are not in assist mode. If you need to press the F key twice to send an F to the computer screen you are in assist mode.

Example: To use F7 in assist mode:

- Press and release Caps Lock 3 times (to turn assist mode on)
- Press and release the F key (this is held down by assist mode)
- Press and release the 7 key
- Press and release Caps Lock 3 times (to turn assist mode off)

Assist mode enhances the Windows Sticky Keys accessibility option.

Example: To use Alt-F4 in assist mode with Windows Sticky Keys:

- Turn Windows Sticky Keys on
- Press and release Caps Lock 3 times (to turn assist mode on)
- Press and release the Alt key (this is held down by Windows Sticky Keys)
- Press and release the F Key (this is held down by assist mode)
- Press and release the 4 key
- Press and release Caps Lock 3 times (to turn assist mode off)
- Turn Windows Sticky Keys off



BigKeys LX Accessories

Keyguard

Guides the finger to the correct key while fully supporting the hand. Snap on/off design allows for change of user and easy cleaning. Available in Perspex or metal.

Clear Flexible Glove

Provides tough waterproof protection from liquid spills, dust and dirt.

PS2 Y-Key Splitter

Allows the connection of two PS2 devices with one PS2 computer port at the same time.

PS2 to USB Y-Key Splitter

Allows the connection of two PS2 devices to one USB computer port at the same time.

USB Adapter

For an USB-equipped computer.



BigKeys LX Features

To obtain the following features press and release the F key, then press and release the additional key.

F1 to F12	F + appropriate number
F10	F + I + 0
F11	F + /
F12	F + '
PgUp	F + arrow up
PgDn	F + arrow down
Home	F + arrow left

End	F + arrow right
Print Screen	F + P
Euro Symbol	F + E
[F + ;
]	F + '
{	F + shift + ;
}	F + shift + '

To change between an ABC and QWERTY layout visit our website www.BigKeys.co.uk